

How to use

Charging your device using Cable


1. Connect your device to the Power Bank with a Type C cable or USB cable, it will automatically start charging. The LED screen will turn on and show the percentage of remaining power.
2. When your device is fully charged, the charging process will stop to avoid overcharging your device.

Charging your device using the wireless charger

1. Click the power button on the side to activate wireless charging, then place the wireless-enabled device on top of the wireless charging logo. Charging should begin within 1~2 seconds once the device is detected.
2. If no wireless-enabled device is detected, wireless charging will turn off after 25 seconds. Or you can manually turn it off by double-tapping the power button.

Re-charging the power bank

1. Use C1 (100w max) or C2 (45w max) to charge the power bank. Use one port only.
2. In order to ensure fast and safe charging of the power bank, it is recommended to use a certified power adapter.
3. It takes about 30 minutes to fully charge the power bank with a 100w PD charger and cable.

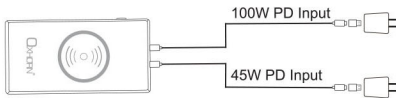

4

Caution:

Please read this safety information carefully before using the product.

1. Do not drop, misuse or apply excessive force to your power bank. Power banks contain batteries and a circuit board with fragile components that can be damaged if misused. If you drop or damage your power bank, discontinue use immediately.
2. If crushed, punctured, exposed to fire or high temperatures or disassembled, batteries may catch fire, explode or cause burns.
3. If your power bank swells or bulges, stop use immediately and dispose of the power bank in an appropriate manner. Continued use may cause the power to catch fire or explode.
4. Do not charge the power bank in a cool and dry place. Don not store in hot or humid environments. Eg. In a car or directly in the sun.
5. Power bank usage by children should be supervised.
6. Do not dispose of power bank in heat or fire.
7. All power banks have safety power cut off features to stop overcharging & overheating. However, we recommend disconnecting the power bank once it's fully charged and removing all cables.
8. When charging a device, the power bank may feel warm, this is a normal operating condition & should not be cause for concern.
9. In normal conditions, battery performance will decline over several years.
10. Operating temperature should be between 10 C to 45 C.

5

Universal 20000mAh USB-C PD Laptop Power Bank

Model: NB-PB145W



User Manual

Product Features:

Charge your MacBook, Ultrabook, Laptop, and mobile devices on the go with the most powerful Universal 20000mAh PD power bank. This lightweight power bank offers 145W Power Delivery for fast charging. With dual Type-C ports and a USB-A output, you can charge your laptop, MacBook, or ultrabook as well as your cellphone and tablet while out and about.

Product Specification:

Capacity: 20000mAh
 Battery: Lithium-Ion
 Input C1: DC 5V-20V 5A 100W(Max)
 Input C2: DC 5V-20V 2.25A 45W(Max)
 Output C1: DC 5V-20V 5A 100W(Max)
 Output C2: DC 5V-20V 2.25A 45W(Max)
 Output A1: DC 5V-3A, 9V-2.67A, 12V-2A
 Wireless output: DC 5W, 7.5W, 10W, 15W
 Product dimensions: 150*78*26mm
 Product weight: 426g

What's in the Box:

- 1 x Universal 20000mAh USB-C PD Laptop Power Bank
- 1 x 100W 5A Type-C to Type-C cable with E-marker
- 1 x User Manual



1

Product Overview:

Power Button


Battery Status LED



USB-C Input / Output
Power Delivery 100W

USB-C Input / Output
Power Delivery 45W

USB-A Output
Quick Charge 3.0

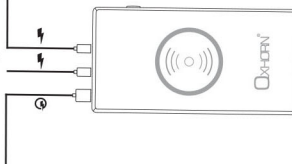


2

How to Use:


1. Multi charger

Three output ports, charge up to three devices at once, 1x USB-C 100W, 1x USB-C 45W Power Delivery port and 1x USB-A QC3.0 Quick Charge port

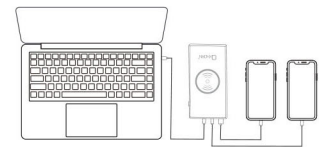

2. 100W or 45W Power Delivery Charger

Type-C Power Delivery 100W or 45W to fast charge your compatible laptops, can charge two laptops simultaneously.

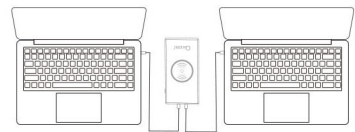

OxHORN
Tough on Quality

<http://www.oxhorn.com.au>
<http://www.oxhorn.com.au/contact>



Model: NB-PD100

3